

Product: Bose® AV18, AV38, and AV48 Media Center (Lifestyle® 18 II, 28 II, 38 and 48 system)

Subject: DVD Region Codes 2-6.

Solution: By pushing the following buttons on the remote control, you can update the media center to be compatible with the new region. Perform the following two procedures.

1. Initialize the Media Center:

To initialize the media center so its region code can be changed, place a DVD in the unit and select DVD. After the system displays "Invalid Region Code", press the following buttons in the sequence below on the media center's remote control.

- Right Navigation Arrow
- Up Navigation Arrow
- Shuffle Button
- Stop Button
- Mute Button

2. Set the Region Code:

With the Media Center on, open the DVD tray and insert a DVD disc. While the DVD tray is open, press the following buttons in the sequence below on the media center's remote control.

- Stop Button
- Shuffle Button
- Region number of the DVD disc you inserted in the tray (i.e. for region 4, press the number 4 button)
- Enter

Note:

1. The region code setting will remain unless it is changed via the step 2 method or power is removed.
2. The DVD will resume play at the point it was ejected. If the region map is displayed and cannot be by-passed, clear the cache by one of the following methods - press stop twice (clears disc cache), remove and reapply power (erases cache).

Important Note:

Currently this capability is only available on Lifestyle® 18 II, 28 II, 38 and 48 systems sold in DVD region 2-6. Early production units may not respond to this procedure and will require a software update to have this capability. Contact Bose Corporation in your country for software update instructions.